#MFDP12



Welcome to your Montford Digital Piano

User Manual and assembly instructions

Congratulations!

You're just moments away from enjoying your new Montford MFDP12 digital piano.

Your new Montford MFDP12 digital piano has two very special features: A 88 Note, Graded Hammer Action Keyboard:

This means that your Montford digital piano will feel just like a real acoustic piano. That's really important when playing, practising or performing as your fingers will get stronger; the keys will respond properly to more advanced techniques; and when you play an acoustic piano in the future, it will feel much more familiar.

An incredible Grand Piano tone from DREAM:

This remarkable sound chip from the French music tech company, DREAM, gives you a truly excellent piano sound, previously reserved for only the most exclusive digital pianos. Close your eyes and you'd think you were playing a full sized grand piano. It's really that good!

1. Assemble your new Montford Digital Piano.

- *Caution* We recommend that two people are present for assembly.
- Follow the assembly instructions, taking care to assemble as shown on the opposite page.
- We estimate that assembly of the piano stand will take no more than 30 mins from start to finish.
- You will need a cross-head screwdriver.

2. Connect the Pedals to the Piano:

- As part of the piano stand you have 3 integrated expression pedals.
- These pedals are connected to the main piano keyboard via a 5 pin cable which trails from the pedal board of the stand.
- This socket is located underneath the piano, to the left. Not on the back panel.

3. Turn the piano 'ON':

- To keep the aesthetic clean and simple, the power button is located UNDER the left hand side of the front of the piano.
- Just feel for the switch, and 'flick'! You're good to go.

4. Adjust the volume:

- Next to the power switch, under the front left hand side of the piano is the volume control.
- Turn this rotary knob to the left to decrease volume, and to the right to increase the volume.

5. Listen on Headphones:

- For silent practise and even silent lessons too (!) you can plug headphones into the back of the piano. Note: When using headphones, the speakers are muted, so no one else can hear.
- As the Montford MFDP11 is equipped with 2 headphone sockets, both you and a chosen companion or teacher can play or practise without disturbing anyone else!
- The headphone sockets are located underneath the piano to the left-hand side, adjacent to the power switch and volume control.


6. Connect your Montford Digital Piano to a Computer or Tablet.

 
 Also on the back of the piano is a MIDI USB connector. Using the appropriate cable, you can connect your piano to your computer to control other music equipment or to record into a Digital Audio Workstation (DAW).








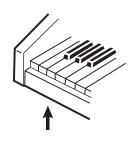








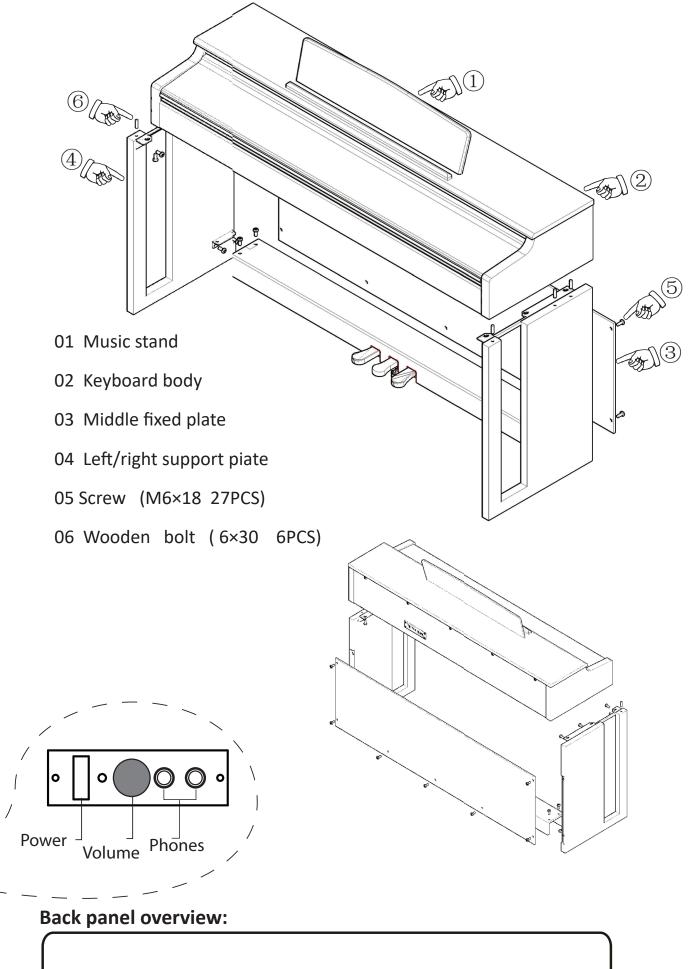

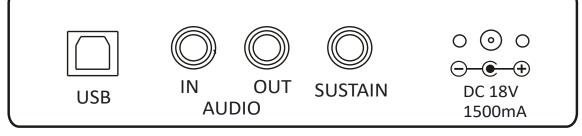



Montford (R) is a registered trademark of Barnes & Mullins Ltd.



PLEASE RECYCLE ALL PACKAGING IN **ACCORDANCE WITH LOCAL REGULATIONS.**





